

Electric

AMERIHOME

Cotton Candy Maker

Spin Your Cotton Candy At Home! Easy To Use,
Just Add Your Own Hard Candy & Sugar

Great
Tasting! Use
Any Flavor
Hard
Candy!

Your Friends And Family Will
Enjoy Making Their Own Tasty
Treats With Ingredients
Found In Any
Household Kitchen.



Use Any Hard Candy, Table
Sugar And A Straw For A
Quick & Fun Activity!



Turn Power On
To Warm Up



Drop In One Piece
Of Hard Candy



Add 2 or 3 Scoops Of
Sugar, Then Turn On



Rotate Stick As "Floss"
Begins To Build Up



Cotton Candy Forms
In Under 5 Minutes!

CANDY IN
5
MINUTES

Suction Cup Feet
Attach Securely
To Table

Package Color Box

Item No.	UPC	Case Wt.	Cubic Ft.
CCMAKER	0 27077 07780 3	26.6	3.81