

Mini 12V DC

SPORTSMAN
EARTH  SERIES

Chain Saw Chain Sharpener

Sharpens most types of chainsaw chains
Portable design for on-site sharpening

- **55W 2500 RPM**
- **Includes: One 12V Sharpener**
- **(A) 25°-30°-35° Angle Guide**
- **(B,C,D) Three Collets (same size)**
- **(E) Depth-Gauge**
- **(F) Collet Nut**
- **(G) Collet Cap**
- **(H) Wrench**
- **(I) 5/32" (J) 3/16" (K) 7/32" Grinding Stones**
- **Dressing Brick (L) and Orange Template (M)**



There are numerous types of saw chains used on different kinds of chain saws. Assemble your chain saw sharpener to suit the particular chain on your saw.

1. Determine what size stone is required to sharpen your chain. Refer to your chain saw's owner's manual. Many times the size and pitch of the chain is stamped or printed on the chain saw's bar.
2. The Saw Sharpener includes 3 different size stones:

5/32" (smallest diameter stone)


Fits saws with 1/4 pitch or 3/8" Low Profile chain

3/16" (medium diameter stone)

Fits saws with .325" Pitch chain

7/32" (largest diameter stone)

Fits saws with 3/8" Pitch chain

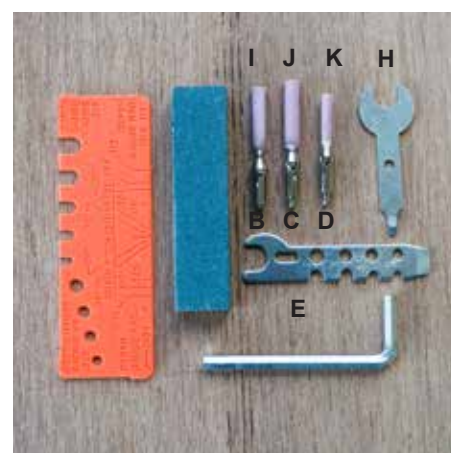

Item No.	UPC No.	Case Wt. Lbs.	Cubic Ft.	Case Qty.
MINICSS	0 27077 08189 3	52.8	2.0	50/1
950 Hoff Road O'Fallon, MO 63366 Phone 636.532.9888 Fax 636.537.1055				