

ARSEAT

Adjustable Roller Seat Installation Instructions Max Weight Capacity 300 lbs



READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS PRODUCT.

This manual provides important information on proper operation & maintenance. Every effort has been made to ensure the accuracy of this manual. These instructions are not meant to cover every possible condition and situation that may occur. We reserve the right to change this product at any time without prior notice.

IF THERE IS ANY QUESTION ABOUT A CONDITION BEING SAFE OR UNSAFE, DO NOT OPERATE THIS PRODUCT!

HAVE QUESTIONS OR PROBLEMS? DO NOT RETURN THIS PRODUCT TO THE RETAILER - CONTACT CUSTOMER SERVICE at 1-888-287-6981.

If you experience a problem or need parts for this product, visit our website for more information <http://www.buffalotools.com> or call our customer help line at **1-888-287-6981, Monday-Friday, 8 AM - 4 PM Central Time**. A copy of the sales receipt is required.

FOR CONSUMER USE ONLY – NOT FOR PROFESSIONAL USE.

KEEP THIS MANUAL, SALES RECEIPT & APPLICABLE WARRANTY FOR FUTURE REFERENCE.

⚠ WARNING

READ AND UNDERSTAND ALL INSTRUCTIONS. Failure to follow all instructions listed below may result in serious personal injury.

- Do not use the product for anything other than its intended purpose.
- Keep the product out of the reach of children and pets. This product is not intended for use by children.
- Close supervision is necessary when this product is used near children.
- Place the product on a flat, steady, stable, scratch-resistant surface.

ASSEMBLY INSTRUCTION

1. Identify all parts:



5 pcs Caster Wheels
(2.5" x 3/4" Plastic)



1 pc Seat Cushion



1 pc Tool Caddy



1 pc Pneumatic Cylinder

2. Attach each caster wheel into tool caddy. Be certain the cap nut (with domed top) is placed after split-lock washer

3. Insert Pneumatic Cylinder into Tool Caddy center hole and press down firmly.

4. Place Seat Cushion on top of cylinder, press down firmly.



Cap Nut



Split-lock washer

Note: Seat adjusts from 16" To 20"