

AWELD160

ARC Welder w/Thermal Overload Assembly & Operating Instructions



READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS PRODUCT.

This manual provides important information on proper operation & maintenance. Every effort has been made to ensure the accuracy of this manual. These instructions are not meant to cover every possible condition and situation that may occur. We reserve the right to change this product at any time without prior notice.

IF THERE IS ANY QUESTION ABOUT A CONDITION BEING SAFE OR UNSAFE, DO NOT OPERATE THIS PRODUCT!

HAVE QUESTIONS OR PROBLEMS? DO NOT RETURN THIS PRODUCT TO THE RETAILER - CONTACT CUSTOMER SERVICE.

If you experience a problem or need parts for this product, visit our website <http://www.buffalotools.com> or call our customer help line at **1-888-287-6981**, Monday-Friday, 8 AM - 4 PM Central Time. A copy of the sales receipt is required.

FOR CONSUMER USE ONLY – NOT FOR PROFESSIONAL USE.

KEEP THIS MANUAL, SALES RECEIPT & APPLICABLE WARRANTY FOR FUTURE REFERENCE.

RECOGNIZE SAFETY SYMBOLS, WORDS AND LABELS

What You Need to Know About Safety Instructions

Warning and Important Safety Instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur. Common sense, caution and care must be exercised when assembling or using this product.

Always contact your dealer, distributor, service agent or manufacturer about problems or conditions you do not understand.



This is a safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



This is a safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

GENERAL PRODUCT SPECIFICATIONS



Dimensions 14 1/2" x 9 3/4" x 10"

Welding Current 55 ~ 160 Amps (AC operation)

Absorbed Power 5.4 Kilowatts

Power Requirement 230 VAC, single phase, 60 hz

Duty Cycle 10% @ 160 Amps (AC)

Power Consumption 230 VAC/ 60 Hz / Single Phase

Open Circuit Voltage 48 VC

Thermal Overload Protection AC setting: 10 minutes shutdown; 3 minutes back on

Cables Ground: 4 AWG, single insulation, 6'.....Torch: 4 AWG, single insulation, 6'

Accessories Handle / Wire Brush /Face Shield

Weight 39.6 lbs

WARNING! Always wear eye, hearing, and breathing protection!

FEATURES:

- Power switch lights up to tell you the power is on
- Thermal overload protection with yellow indicator light
- 6.5 ft welding cable
- 5 ft. ground cable with clamp
- Easy carry handle
- Duty cycle: 10% @ 160 amps (230 volts)
- Electrode capacity: 5/64" to 5/32" (2-4 mm)
- Weldable materials: mild steel, cast iron, stainless steel
- Material thickness: 18 gauge (1/4" thick)
- Includes face shield, chipping hammer with wire brush

SPECIFICATIONS

- Rated Current 55 Amp-160 Amps
- Rated Voltage 230 V 60 HZ

KEEP THIS MANUAL, SALES RECEIPT & APPLICABLE WARRANTY FOR FUTURE REFERENCE. READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS PRODUCT. When unpacking, check to make sure all parts listed are included. If any parts are missing or broken, please call Customer Service at 1-888-287-6981.

FOR CONSUMER USE ONLY – NOT FOR PROFESSIONAL USE

IMPORTANT SAFETY RULES

COMMON SENSE AND CAUTION ARE FACTORS WHICH CANNOT BE BUILT INTO ANY PRODUCT. THESE FACTORS MUST BE SUPPLIED BY THE OPERATOR.

WARNING

Keep your work area clean and well lit. Cluttered work benches and dark work areas may cause accidents or injury.

Do not operate power tools in explosive areas, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.

Keep bystanders, children and visitors away while operating a power tool. Distractions can cause you to lose control.

WARNING

Wash hands after handling the cord. Touching the cords could expose you to lead, which is known in the State of California to cause cancer, birth defects and other reproductive harm.

WARNING

Keep children, and other distractions at a distance while operating power tools.

⚠ WARNING

Double insulated tools are equipped with a polarized plug (one blade is wider than the other.) This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a polarized outlet. Do not change the plug in any way. Double insulation eliminates the need for the three wire grounded power cord and grounded power supply system.

Avoid body contact with grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is grounded.

Do not abuse the cord. Never use the cord to carry the tool or pull the plug from an outlet. Keep the cord away from heat, oil, sharp edges, or moving parts. Replace damaged cords immediately. Damaged cords increase the risk of electric shock.

When operating the tool outside, use an outdoor extension cord marked “WA” or “W.” These cords are rated for outdoor use and reduce the risk of electric shock. Make sure the extension cord being used is in good condition. If there are any cuts or nicks (no matter how deep) in the insulation, DO NOT use that cord. Also, make sure the extension cord is heavy enough to carry the current needed. DO NOT use small "around-the-house" lamp extension cords. These cords can easily overheat and/or catch fire when used with power tools.

⚠ CAUTION

Do not force tool. Use the correct tool for your application. The correct tool will do the job better and safer at the rate for which it is designed.

Do not use the tool if the power switch does not turn it “ON” or “OFF”. Any tool that cannot be controlled with the switch is dangerous and must be repaired.

Disconnect the power cord plug from the power source before making any adjustments, changing accessories or storing the tool. Such preventive safety measures reduce the risk of starting the tool accidentally.

⚠ DANGER

People with pacemakers or other electronic devices should consult with a physician before operating this product. Interruption or failure of the pacemaker could occur when electrical equipment is operated within close proximity of electrical devices.

⚠ WARNING

All work areas should be clean and well lit. Accidents are more likely to occur in poorly lit and cluttered areas.

⚠ WARNING

Keep the power cord in good condition, and replace damaged cords immediately. Do not use the cord to pull the plug from the outlet. Keep the cord away from materials and surfaces that could damage cords. The risk of electric shock increases when the power cord is damaged.

⚠ WARNING

Always use the appropriate extension cord, making sure it is rated for use with power tools. Always be sure the extension cords are in good condition, free of cuts or nicks in the insulation. If using the power tool in an outside area with an extension cord, make sure the cord is rated for outdoor use.

⚠ WARNING

Prevent eye injury and burns. Wearing and using ANSI-approved personal safety clothing and safety devices reduce the risk for injury.

Wear ANSI-approved safety impact eye goggles with a welding helmet with protective lens.

⚠ WARNING

Do not make contact with a grounded surface while using this power tool. Contact with surfaces like pipes, radiators or major appliances increases your risk of electric shock.

⚠ WARNING

Use common sense while operating this power tool.

Do not use this tool if you are:

Feeling tired or are under the influence of alcohol or drugs.

Wearing loose clothing or jewelry. Keep long hair pulled back and away from moving parts.

Overreaching or have improper footing. Handling the tool in this way could cause serious injury.

When using this power tool always:

- Wear the proper safety equipment, such as safety goggles, dust masks, non-skid shoes, etc.
- Check to be sure all adjusting keys or wrenches have been removed before starting the power tool.
- Check to be sure the power switch is in the "OFF" position before plugging the power tool into an electrical outlet.

⚠ CAUTION

Follow these steps to maintain safe working conditions and good working condition of power tools.

Improper care can result in electric shock or serious injury.

- Secure and support the work piece using clamps. **Do not use your hands to hold the piece in place.**
- **Use the correct tool for the job.** Using the correct tool is safer and faster.
- **Make sure the power switch is in good working order.** If the power switch no longer turns the tool "ON" or "OFF", discontinue use, and have the tool replaced or repaired.
- **Remove the power cord from the power source before storage, changing accessories, or moving the tool.**
- **Keep out of reach of children**, or any untrained person. Store tools in a safe and dry place.
- **Keep tools clean, and cutting tools sharp.** Maintaining tools with proper care will increase the life of the power tool, and reduce the risk of injury.
- **Check to be sure all moving parts are free from binding and are properly aligned.**
- Use only accessories that are recommended by the manufacturer for your tool model.

Maintain labels and nameplates on the Welder. These carry important information.

Avoid unintentional starting. Make sure you are prepared to begin work before turning on the Welder.

Do not force the Welder. This tool will do the work better and safer at the speed and capacity for which it was designed.

Never leave the Welder unattended when it is plugged into an electrical outlet. Turn off the tool, and unplug it from its electrical outlet before leaving.

Industrial applications must follow OSHA guidelines.

Never stand on the Welder. Serious injury could result if the Welder is tipped or if hot surfaces are accidentally contacted.

Keep construction debris out of vents and power button by blowing with compressed air. If compressed air is unavailable, use a soft bristle shop brush.

Use only mild soap and a slightly damp cloth to clean the tool.

SERVICE

Tool service must be performed only by qualified repair personnel. Service or maintenance by unqualified personnel could result in a risk of injury.

When servicing a tool, use only identical replacement parts and follow instructions in the manual. Use of unauthorized parts or failure to follow Maintenance Instructions may create a risk of shock or injury.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

This manual contains important information regarding safety, operation, maintenance and storage of this product. Before use, read carefully and understand all warnings, cautions, instructions and labels. Failure to do so could result in serious personal injury, property damage or even death.

 




WARNING

Before using this tool, you need to become familiar with its operation. If you are unsure about the operation of the tool, or have any questions about its proper use, call the Customer Service Department at 1-888-287-6981. Follow these instructions for safe handling of the tool:

- **Always secure and support the work piece using clamps. Do not use your hands to hold the piece in place.**
- **Be sure your work area is clean and secure before turning the power switch into the “ON” position.** Be sure the area is free from all foreign material, nails, staples, or any other material.
- **Turn the tool “OFF” and unplug from the power source before making any changes or adjustments to the tool.**
- **Do not use solvents containing carbon tetrachloride, ammonia or acetone to clean the welder.** Never use gasoline, paint thinner, or other caustic chemicals that can damage the plastic parts of the tool.
- **Always use the appropriate safety gear when operating this welder.** Including but not limited to, goggles, dust mask or respirator. Always work in a well-ventilated area to reduce your exposure to harmful chemicals and dust particles.

SPECIFIC SAFETY RULES AND/OR SYMBOLS

The following symbols may be used on your tool. Be familiar with and learn the symbols to operate the tool safely.


Symbol	Name	Description
V	Volts	Voltage (Potential)
A	Amperes	Current
Hz	Hertz	Frequency (Cycles per Second)
W	Watt	Power
Kg	Kilograms	Weight
	Alternating Current	Type of Current
	Direct Current	Type of Current
	Alternating or Direct Current	Type of Current
	Earthing Terminal	Grounding Terminal
	Class II Construction	Denotes Double Insulation
min	Minutes	Time
s	Seconds	Time
ϕ	Diameter	Size of Drill Bits, Grinding Wheels, etc.
n_0	No Load Speed	No-load Rotational Speed
.../min	Revolutions per Minute	Revolutions, Surface Speed, Strokes, etc. per Minute
1,2,3...	Ring Selector Settings	Speed, Torque or Position Settings

PACKAGE CONTENTS

Includes Arc Welder, face shield, and chipping hammer with wire brush

COMPONENTS

- 1) Power Button
- 2) Arc Welding Unit
- 3) Wheel (Wheel Hub)
- 4) Torch Cable
- 5) Ground Clamp
- 6) Line Cord
- 7) Handle

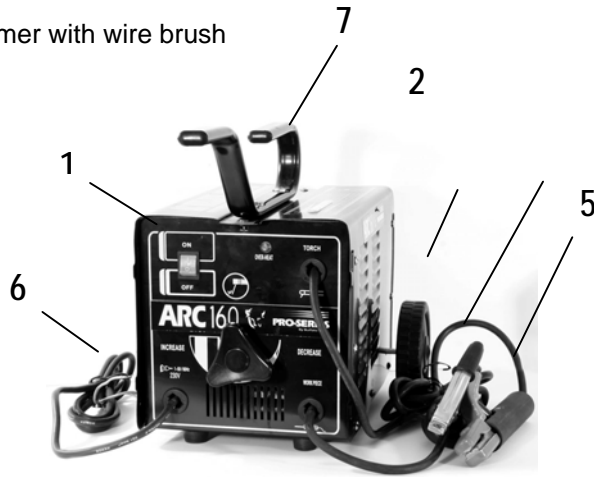

Face Shield & Wire Brush Not Shown

NOTE

Unpack product from package and review contents. Keep all packaging until product has been reviewed.

Use proper size and type extension cord. If an extension cord is required, it must be of the proper size and type to supply the correct current to the tool without heating up. Otherwise, the extension cord could melt and catch fire, or cause electrical damage to the tool.

This tool requires use of an extension cord of 20 amps minimum capability (up to 30 feet), with wire size rated at 10 AWG. Longer extension cords require larger size wire. If you are using the tool outdoors, use an extension cord rated for outdoor use. (signified by "WA" on the jacket).

Note: Performance of this tool may vary depending on variations in local line voltage. Extension cord usage may also affect tool performance.

Warning: The warnings, cautions, and instructions discussed in this instruction manual, cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

WARNING

This product, when used for welding and similar applications, produces chemicals known to the State of California to cause cancer and birth defects, (or other reproductive harm). California Health & Safety Code 25249.5, et seq.

Avoid electrical shock. Do not permit electrically live parts, cables, or electrodes to contact skin, clothing, or gloves. Protective clothing should be hole-free, dry, and ANSI approved.

1. This unit draws enough current to cause serious injury or death. Before turning the welder on, check the electrode holder to be sure that there are no protruding screw heads, and that all insulation is secure. Do not weld unless you are insulated from ground and the work piece.

2. Avoid breathing fumes or gases. They can cause serious health problems. Use an active ventilation system directly above the welding area. Keep your head out of the fumes.

3. Avoid eye and body damage. Arc rays and Infrared radiation can injure eyes and burn skin. Wear ANSI approved eye and body protection. Do not allow viewing by visitors without proper eye and body protection. Use the provided Face Shield with arc shaded filter plate.

4. Know proper arc welding practices. Read and understand the manufacturer's instructions, as well as your employer's safety practices for arc welding.

5. Connect only to a code approved power source. Connect only to a grounding power source conforming to the National Electrical Code and Local Codes.

OPERATION

CAUTION

WARNING! Never look at the ignited arc without ANSI-approved, arc-shaded, eye protection in a full face shield. Permanent eye damage or blindness can occur. Skin burns can occur. Never breathe arc fumes.

WARNING

Good welding requires a high degree of skill and experience. You should practice a few sample welds on scrap metal before you begin welding your first project. Additional practice periods are recommended whenever you weld a different thickness of material, wire, or weld a different type of connection.

1. Attach the Handle to the top of the Arc Welding Unit using the handle screws.
2. Connect an appropriate 220 VAC electrical plug to the line cord. This should be done by a licensed electrician.
3. Place each wheel over the axle and insert the wheel hub.
4. Attach the front foot to the bottom of the Welder using the supplied hardware. Snap the Handle into the Face Shield.
5. Make sure this unit is only for AC Welding.
6. Securely clamp the ground cable clamp as close as possible to the metal object to be welded, or to the metal work bench where the object is mounted and electrically connected.
7. Place the desired welding electrode rod securely into the jaws of the Torch Cable clamp.
8. While viewing the Current Setting gauge, turn the Current Control knob to the correct current setting for the electrode rod being used.
9. Verify that the Power Switch is in the off position, then plug the Welder 220 VAC plug into a dedicated, 40 amp line with delayed action type circuit breaker for fuses.
10. While holding the Torch Cable Clamp with electrode clearly out of the way of any grounded objects, turn the Power Switch to the On position.
11. Place the face shield over your eyes. Never look at the ignited arc without ANSI approved arc shaded eye protection/face shield. Permanent eye damage or blindness can occur. Skin burns can occur. Never breath arc fumes.
12. Stroke the area to be welded with the electrode to ignite the arc. Never tap the electrode into the welding surface to ignite the arc. This damages its external coating on the electrode which prevents oxygen in the air from coming into contact with the molten metal, causing it to oxidize.
13. Once the arc is ignited, tilt the electrode forward at an angle of approximately 30 degrees and hold it at a distance from the welding object equal to the diameter of the electrode. NOTE: If too much current is drawn from the arc welder, the thermal overload protector will activate, the amber indicator will light, and the arc welder will turn off until it cools down. If this happens, turn the Power Switch to the off position and wait about 20 minutes.
14. When the weld is complete, lift the electrode clearly away from any grounded object. Set the face shield down and turn toward the arc welder and turn the power switch to the off position.
15. Remove the electrode from the torch cable clamp.
16. Unplug the power cord from the electrical outlet.

Avoid damage to the Welder by not leaving the unit on for more than the prescribed duty cycle time.

The duty cycle defines the number of minutes, within a 10 minute period, during which a given Welder can safely produce a particular welding current. For example, this Welder has a 10% duty cycle at 160 Amps.

Failure to carefully observe duty cycle limitations can easily over stress a Welder's power generation system, contributing to premature Welder failure.

This Welder is equipped with an internal thermal protection system to help prevent over stressing the unit. When the unit overheats, it automatically shuts down, then automatically returns to service when it cools down.

Note: Once the unit returns to service, follow a more conservative duty cycle routine to help prevent excess wear to the Welder.

TROUBLESHOOTING

Symptom	Probable Cause	Suggested Remedy
Welder does not operate, or continually blows fuses	<ol style="list-style-type: none"> 1. Improper fuse or circuit breaker 2. Fuse blown or circuit breaker tripped 3. Thermal overload protection activated 4. Using incorrect welding techniques 	<ol style="list-style-type: none"> 1. Replace fuse, reset breaker, or use delayed action breaker 2. Replace fuse or reset breaker 3. Wait until the unit cools down and try again. 4. Review recommended welding techniques
Welding current low or weak	<ol style="list-style-type: none"> 1. Low line voltage 2. Welding current setting too low 3. Poor cable connections 	<ol style="list-style-type: none"> 1. Check power source for at least 220 VAC at 40 amps. 2. Turn the Current Control Knob to a higher setting 3. Check and tighten all cable connections
Will not hold an arc	<ol style="list-style-type: none"> 1. Using a low hydrogen rod 	<ol style="list-style-type: none"> 1. Use a rod of 0.078" (2 mm) max. diameter or smaller on 30 - 60 amp range.

MAINTENANCE

⚠ WARNING

Disconnect the power supply before cleaning. Wear safety eyewear before cleaning. Used compressed dry air to blow off dust and debris. Use a soft bristle brush if compressed air is not available.

CAUTION

Applying excessive force can overload the welder, decrease the life and increase the wear on the tool.

CAUTION

Some chemicals can damage the product. Do not use harsh chemicals such as gasoline, carbon tetrachloride, paint thinner, etc.

CAUTION

A qualified repair technician must perform any tool service or repair. Service or maintenance performed by unqualified personnel could result in injury. Use only identical replacement parts. Use of unauthorized parts or failure to follow maintenance instructions may create a risk of electric shock or injury.

ACCESSORIES

Use only accessories that are recommended by the manufacturer for your model. Accessories that may be suitable for one tool may become hazardous when used on another tool.

Always attach grounded (3-prong) extension cords to grounded (3-prong) outlets.

If you must use an extension cord, be sure that the gauge is large enough to carry the amount of current necessary for your power tool. If not, your tool may experience a loss of power, excessive voltage drop or overheating. For example, the smaller the gauge number, the heavier the cord.

