

# **AFCHAIR**

## **Adirondack Folding Chair**

### **Assembly Instructions**

**Max Weight Capacity 300 Lb**



**READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS PRODUCT.**

This manual provides important information on proper operation & maintenance. Every effort has been made to ensure the accuracy of this manual. These instructions are not meant to cover every possible condition and situation that may occur. We reserve the right to change this product at any time without prior notice.

**IF THERE IS ANY QUESTION ABOUT A CONDITION BEING SAFE OR UNSAFE,  
DO NOT USE THIS PRODUCT!**

**DO NOT RETURN THIS PRODUCT TO THE RETAILER - CONTACT CUSTOMER SERVICE.**

If you experience a problem, have questions or need parts for this product, visit our website


<http://www.amerihomebrand.com> or call **Customer Service** at 1-888-287-6981, Monday-Friday,

**8 AM - 4 PM Central Time**, or email : [info@amerihomebrand.com](mailto:info@amerihomebrand.com). A copy of the sales receipt is required.

**KEEP MANUAL, SALES RECEIPT & WARRANTY FOR FUTURE REFERENCE**

## HARDWARE

(A) Lag Bolt 4 pcs

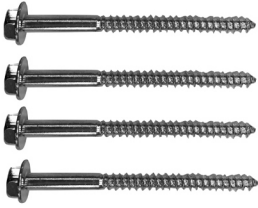

(B) Square Driver Screw 4 pcs



(E) Carriage Bolt 6 pcs



(C) Locking Nut 6 pcs


(D) Washer 6 pcs

## TOOLS YOU WILL NEED

11mm or 7/16 socket

R-2 Square Bit

**\*\*NOTE:** Washer (D) and Locking Nut (C) are to be used with Carriage Bolt (E). Washer (D) and Locking Nut (C) will be on opposite side of the wood as the head of the Carriage Bolt (E).

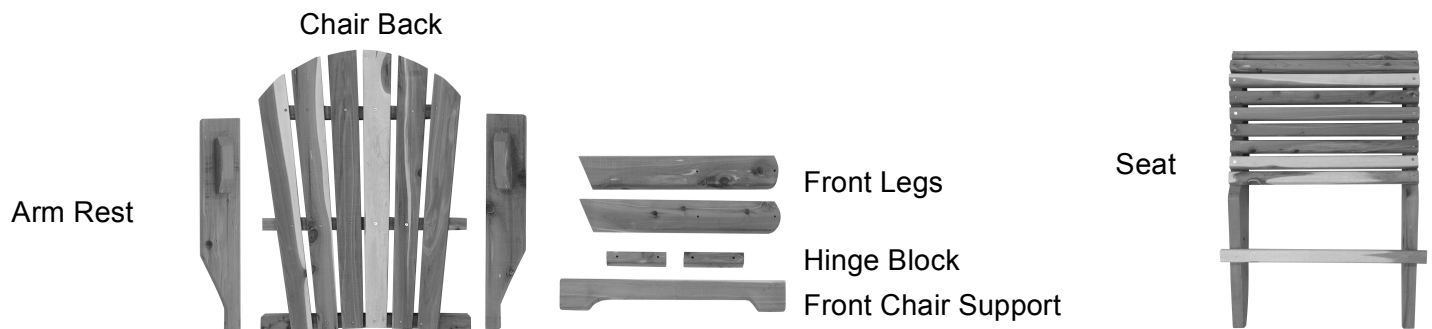


### 1. Attach front legs and arm rest to chair back

A. You will need 2 Carriage Bolts (E), 2 Washers (D), and 2 Locking Nuts (C).

B. Place leg on the inside of the arm rest. Run the Carriage Bolt (E) from inside to the outside of the chair through leg and arm rest.




C. On the outside of the chair, secure Carriage Bolt (E) with Washer (D) and Locking Nut (C) with 11mm or 7/16 socket.

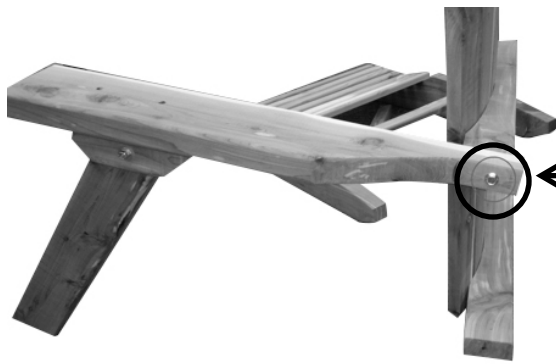

D. Secure back of arm rest using 1 Lag Bolt (A) and 11mm or 7/16 socket.

E. Repeat Steps B through D on the opposite side.


F. At this point, the product should resemble this photo.

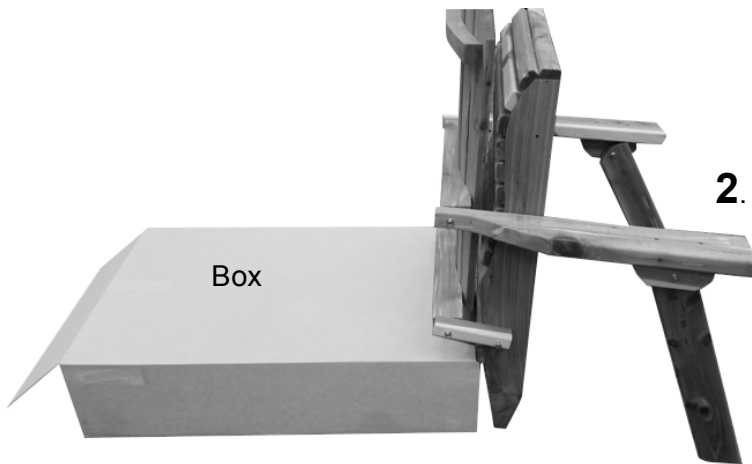

## 2. Attach back of chair and seat of chair.

A. You need 2 Lag Bolts (A), 2 Carriage Bolts (E), 2 Washers (D), and 2 Locking Nuts (C).

B. Slide the box the product was shipped in under the chair back. Allow front legs to support the chair. Slide seat between the chair legs.

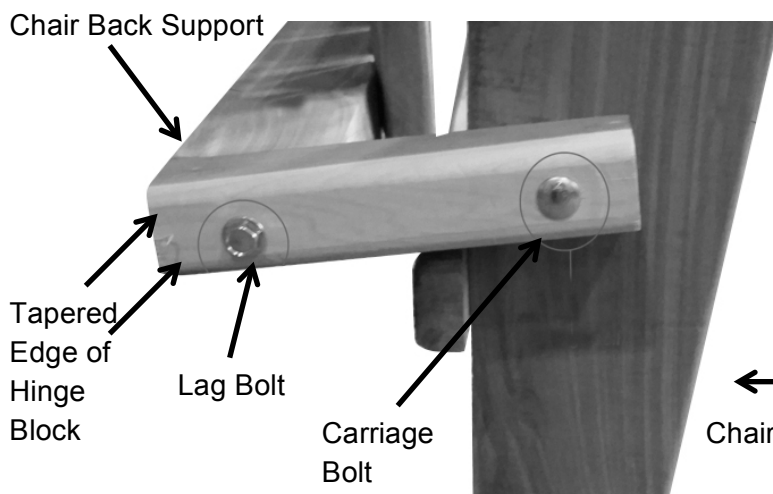

C. Line up Hinge Block and attach using Lag Bolt (A) on the chair back support and Carriage Bolt (E) on seat. Be sure the tapered edges of the Hinge Block are positioned on the outside.


←  
Chair Seat



D. Secure Lag Bolt (A) with Washer (D) and Locking Nut (C) using 11mm or 7/16 socket.


E. Pull the chair back the opposite direction of hinge block.

F. Rotate towards bottom of seat while pulling the back of seat back.

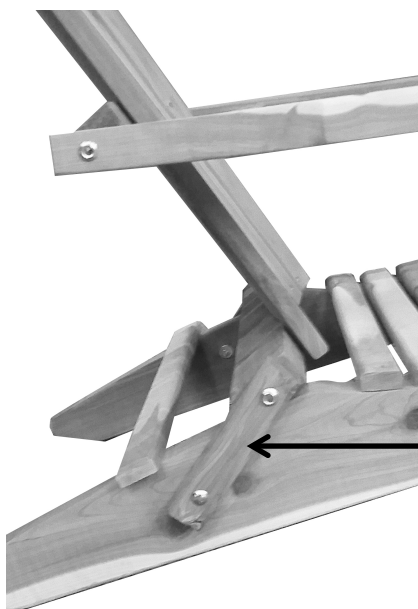

G. Be sure to rotate the Hinge Block once the Block is attached on both sides. Once rotated, tighten all bolts using an 11mm or 7/16 socket.

H. After rotating Hinge Block, product should be in position as shown.

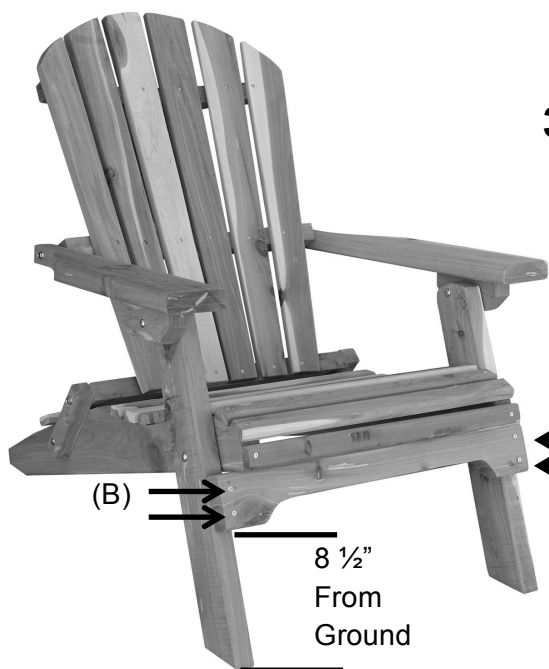

### 3. Attach Front Chair Support.

- A. You will need front support stop and 4 pcs of Square Drive Screws (B).
- B. Adjust front support stop to desired height (Usually around 8 1/2" from the floor)
- C. Fasten front support stop to the front legs using square drive screws (B) and R-2 bit.

Attach Front Chair Support with (B) Square Drive Screws

D. Repeat steps 2a-d on opposite side