

Step-By-Step Quick Start Guide To Using Your Generator

1 Remove Generator From Package

2 Add Oil

Oil Type: SAE10W-30 Oil (Must add BEFORE first use)
Oil Capacity: 18.5 fluid oz
Because this generator includes Low Oil Shut Off, the generator will not start with low oil. Start out with 18.5 oz, then fill until almost overflowing.)

3 Add Fuel

- If using **Gasoline**, add Unleaded gasoline only octane rating of 87 or higher. Maximum Capacity: 3.2 Gallon gasoline fuel tank. Do Not Use E85 Fuel
- If using **Propane**, connect Regulator Hose to Propane Tank and the LP Gas Inlet on Generator.

4 Start The Generator


- Use the generator **OUTDOORS** in a **WELL VENTILATED AREA**.
- **DO NOT CONNECT** electrical devices until **AFTER** the generator is started.
- Turn Engine Switch to ON
 - A. If using **GASOLINE**, Turn **FUEL PETCOCK** to ON (Figure A)
 - B. If using **PROPANE**, connect Turn Tank Valve to ON (Figure B)
- Adjust the **CHOKE** to **CLOSED/CHOKE** position (Figure C)
- Start the generator manually with the **Recoil (Pull) Start**.
- Once the engine has started, **GRADUALLY** move the choke lever to the "RUN/OPEN" position until the engine levels off. Then let the engine run approximately 5 minutes **BEFORE** adding appliances or tools.
- You can now connect electrical devices.




Fuel Petcock (Figure A)



LP Gas Inlet (Figure B)

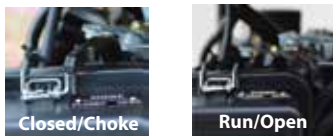

Closed/Choke (Figure C)

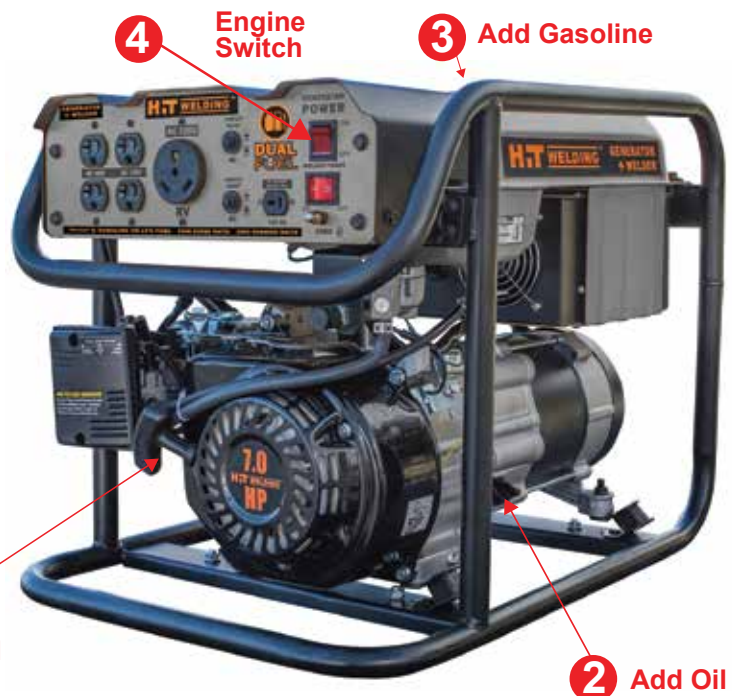

GEN4000DF-STW

4,000 Surge / 3,500 Running Watts

**POWERED BY UNLEADED
GASOLINE OR PROPANE FUEL**

GENERATOR SPECIFICATIONS:

- 7.0 HP Engine, 4 Stroke OHV
- Recoil Start
- 3.2 Gallon Fuel Tank
- Low Oil Shut Off
- AVR Automatic Voltage Regulation
- UL Listed Electrical Components
- Engine Shut Off Switch
- Circuit Breaker & Power Outlets
- 1 - 12V D/C Outlet
- 4 - 120V A/C Outlets
- 1 - 120V RV Outlet
- Complies with EPA emissions
- Run Time : 9 Hours at 50% Load (Gas)
- Run Time : 12 hours @ 50% Load (LPG)
on 20 lbs of LPG Fuel
- Decibel Rating < 69 db @ 0% load
- Warranty: 2 YEAR Limited Emissions
- Warranty: 1 YEAR Limited
- * SURGE WATTS / RUNNING WATTS
MAY BE REDUCED BY 10% WHEN USING
PROPANE FUEL VS USING GASOLINE.

**OIL IS NOT INCLUDED WITH THIS
GENERATOR. IT IS SOLD SEPARATELY.**

Read and understand instruction manual
before using generator.

TOLL-FREE NATIONWIDE HELP LINE! 866-460-9436

Need Help? Call Us First!
Monday-Friday 8:00-4:30 Central Time




GENERATOR + WELDER



GEN4000DF-STW

4,000 Surge / 3,500 Running Watts

POWERED BY UNLEADED
GASOLINE OR PROPANE FUEL

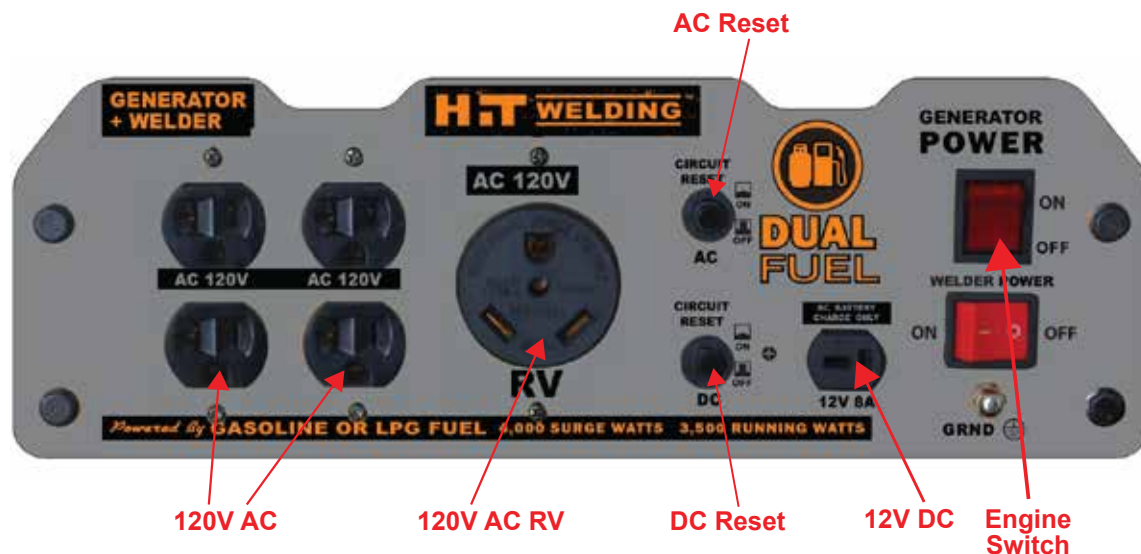

DO NOT CONNECT electrical devices until AFTER the generator is started.

WARNING

IF THERE IS ANY QUESTION ABOUT A CONDITION BEING SAFE OR UNSAFE, DO NOT OPERATE THIS PRODUCT!

Always follow Warning labels placed on the generator, and read and follow all Warning labels included inside the Product Manual.

WARNING: NEVER use a generator inside a home or a garage, EVEN IF the doors and windows are open.

ONLY USE OUTSIDE and far away from windows, doors and vents leading into an enclosed area.

Using a generator indoors can kill you in minutes. The generator produces an exhaust that contains carbon monoxide. This is a poison you cannot see or smell.

Do not attach a chain or rope to secure the generator to a post as this can be difficult to remove in the event of an emergency.

NOTES

Outlets available on this generator, from left to right:

- 1 x 12 Volt D/C Outlet
- 4 x 120 Volt A/C Outlets
- 1 x 120 Volt RV Outlet

TOLL-FREE NATIONWIDE HELP LINE! 866-460-9436

Need Help? Call Us First!
Monday-Friday 8:00-4:30 Central Time



GENERATOR + WELDER